



LA VIEILLE GARDE

WINE CELLARS

LVG TEMPERATURE CONTROLLER USER GUIDE

CONTENTS


1. CONTROLLER OVERVIEW	P.3
1.1 DIGITAL DISPLAY	P.3
1.2 TOUCH SCREEN KEYS AND LIGHT	P.3
2. CONTROLLER OPERATION	P.4
2.1 TEMPERATURE SETTING	P.4
2.2 LIGHTING CONTROL	P.5
2.3 LOCK MODE	P.5
2.4 SLEEP MODE	P.6
3. TROUBLESHOOTING	P.7
3.1 ALL LIGHTS ARE FLASHING	P.7
3.2 “- -” IS DISPLAYED	P.7
2.3 °C / °F LIGHTS ARE FLASHING	P.7
4. CONTACT	P.8

1 TEMPERATURE CONTROLLER OVERVIEW

1.1 DIGITAL DISPLAY



1.2 TOUCH SCREEN KEYS AND LIGHT

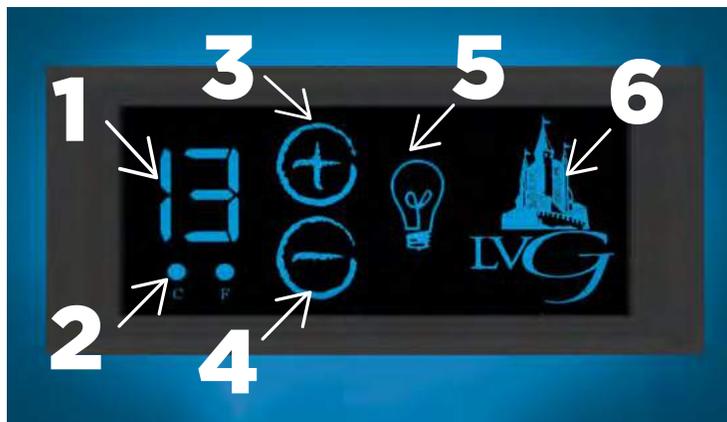


- 1 - Digit segment display
- 2 - Temperature mode °C / °F light
- 3 - Touch screen "+" key
- 4 - Touch screen "-" key
- 5 - Touch screen "Light" key
- 6 - Backlit La Vieille Garde logo

2 CONTROLLER OPERATION


2.1 TEMPERATURE SETTING

 To change the temperature set point, touch either the “+” or “-” keys. The digit display will flash and show the actual set point. All subsequent touches to the “+” or “-” keys will affect the temperature set point.

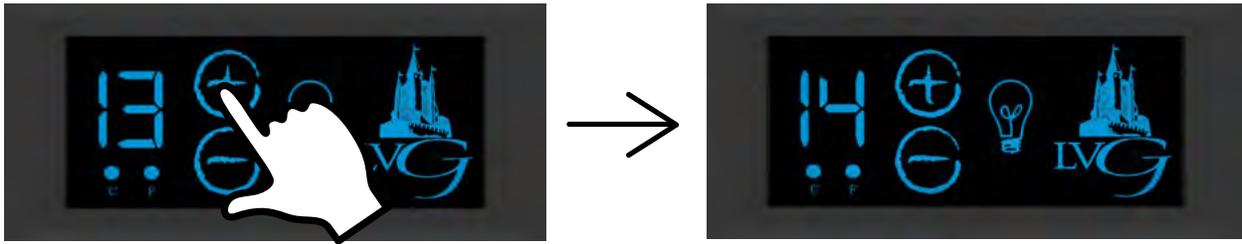

 The set point range of this system is from 2°C/36°F to 20°C/68°F.

 While the digit display is flashing, touching the “Light” key will toggle between Celsius and Fahrenheit. The selected mode is shown by °C / °F light.

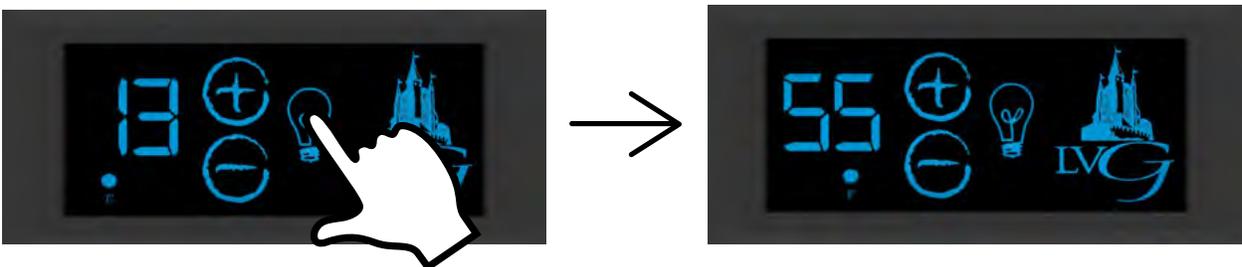


 If no operation is selected within 3 seconds, the new temperature or mode will be recorded. The digit display will then stop flashing and return to the current temperature display mode.

Note: If the unit is in sleep mode, any press on the “+” or “-” keys will enable active mode.

2.2 LIGHTING CONTROL

 The lighting intensity is controlled by the “Light” key represented by a bulb

 Every touch on the “Light” key, will change the lighting intensity to one of the four programmed modes (Off, 33%, 66%, 100%).

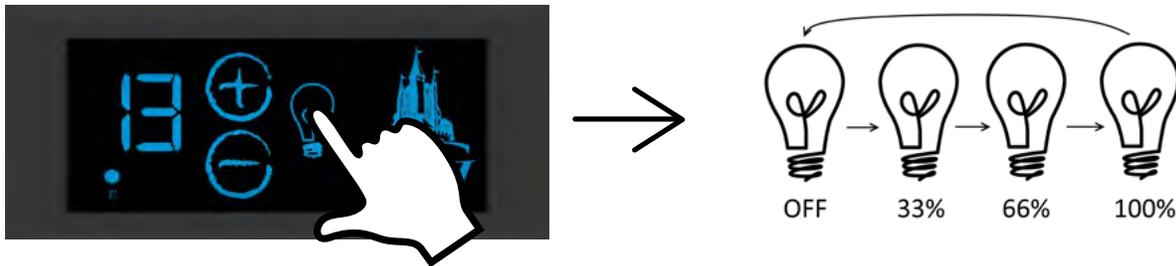


Note: If the unit is in sleep mode, any press on the “Light” keys will enable active mode.


2.2 LOCK MODE

 The display can be locked to prevent accidental changes to the temperature or lighting setting.

 To enter Lock mode, hold down the “Light” key and momentarily press the “-” key. The LVG backlit logo will flash once and the lighting of the “+”, “-” and “Light” keys will turn off.

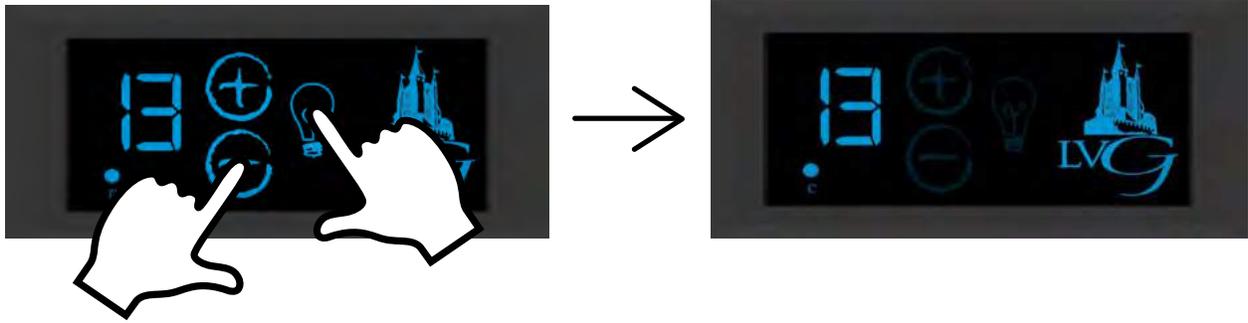

 To exit lock mode, hold down the “Light” key and momentarily press the “+” key. The LVG backlit logo will flash once and the lighting of the “+”, “-” and “Light” keys will turn on.

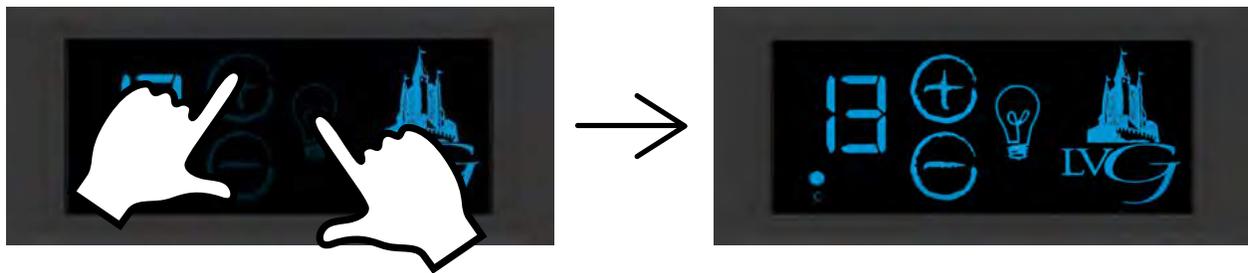

2.2 SLEEP MODE


 If no key is touched for more than one minute, the unit will automatically go into sleep mode.

 In sleep mode, the lighting of the “+”, “-” and “Light” keys is off. The backlit logo, digit display and °C / °F lights are dimmed.





Touching any keys will enable active mode.

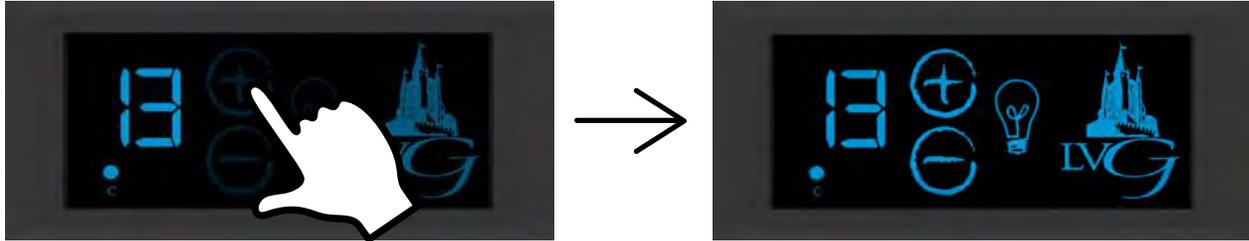

3 TROUBLESHOOTING

3.1 ALL LIGHTS ARE FLASHING

If the display unit does not receive a signal for more than 5 seconds, all the lights will flash at maximum intensity. In this case, check the wiring between the display unit and the control box.

3.2 “- -” IS DISPLAYED

This code means that no temperature sensor is connected / detected. Check the wiring connected to the control box.

3.3 °C / °F LIGHTS ARE FLASHING

This code means that the temperature reading is above 37 °C / 99 °F or below 0 °C / 32 °F. Check the temperature sensor.

CONTACT

Please refer to the “ Warranty Terms and Maintenance ” document provided for any question regarding the warranty terms of the various components and the maintenance of your unit.

If you experience any issues or have technical questions, please contact us.



La Vieille Garde inc.,
info@laviellegarde.com - 1.866.673.4832
3111 Boul. Martel, St-Honoré, Qc, Canada, G0V1L0