

# Case & Crate 2.0 Back

Locker or Bin Back (CC-BACK) Installation Instructions



The Back is a design upgrade to any Case & Crate Bin or Locker unit, securing the storage with a thin metal sheet to hide the walls behind.


*Video guides, spec sheets, and additional support are available at [vintageview.com](http://vintageview.com).*

## Parts List

- (1) CC Back Panel
- (6) Self-Drilling  
Screws

## Tools needed

- Drill with Phillips head bit
- Small clamp (optional)

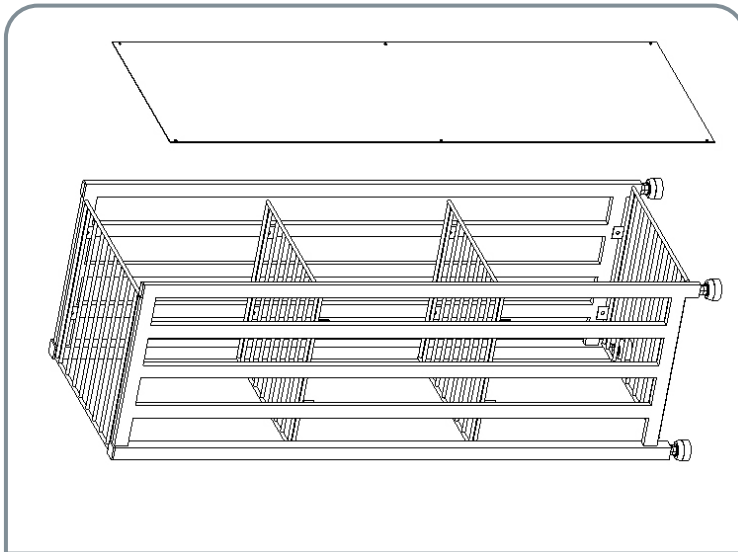

## Step 1: Prep the Back

Fully assemble any Case & Crate unit (sold separately). With the unit laying face down on the floor; line the edges of the panel up with the edges of the unit. The panel will cover the back of each bin.

Backs will overlap when installing to more than one consecutive Bin or Locker unit.

**Pro tip:** For large installations of Bins or Lockers being retro fitted, the panel can be clamped in place while the unit is upright.

## Step 2: Assemble

Secure the Back back using provided self-drilling screws. Check alignment and repeat for remaining three (3) mounting holes.

When installing Backs to consecutive Bins or Lockers, mounting holes may be shared between two Backs.

*\*There are no pilot holes on the uprights of the Bins or Lockers. Self-drilling screws will catch into the steel easy with opposing force (floor, wall, or a sturdy friend pushing back).*

