


Universal Ducting Kit Installation Instructions

By WhisperKOOL

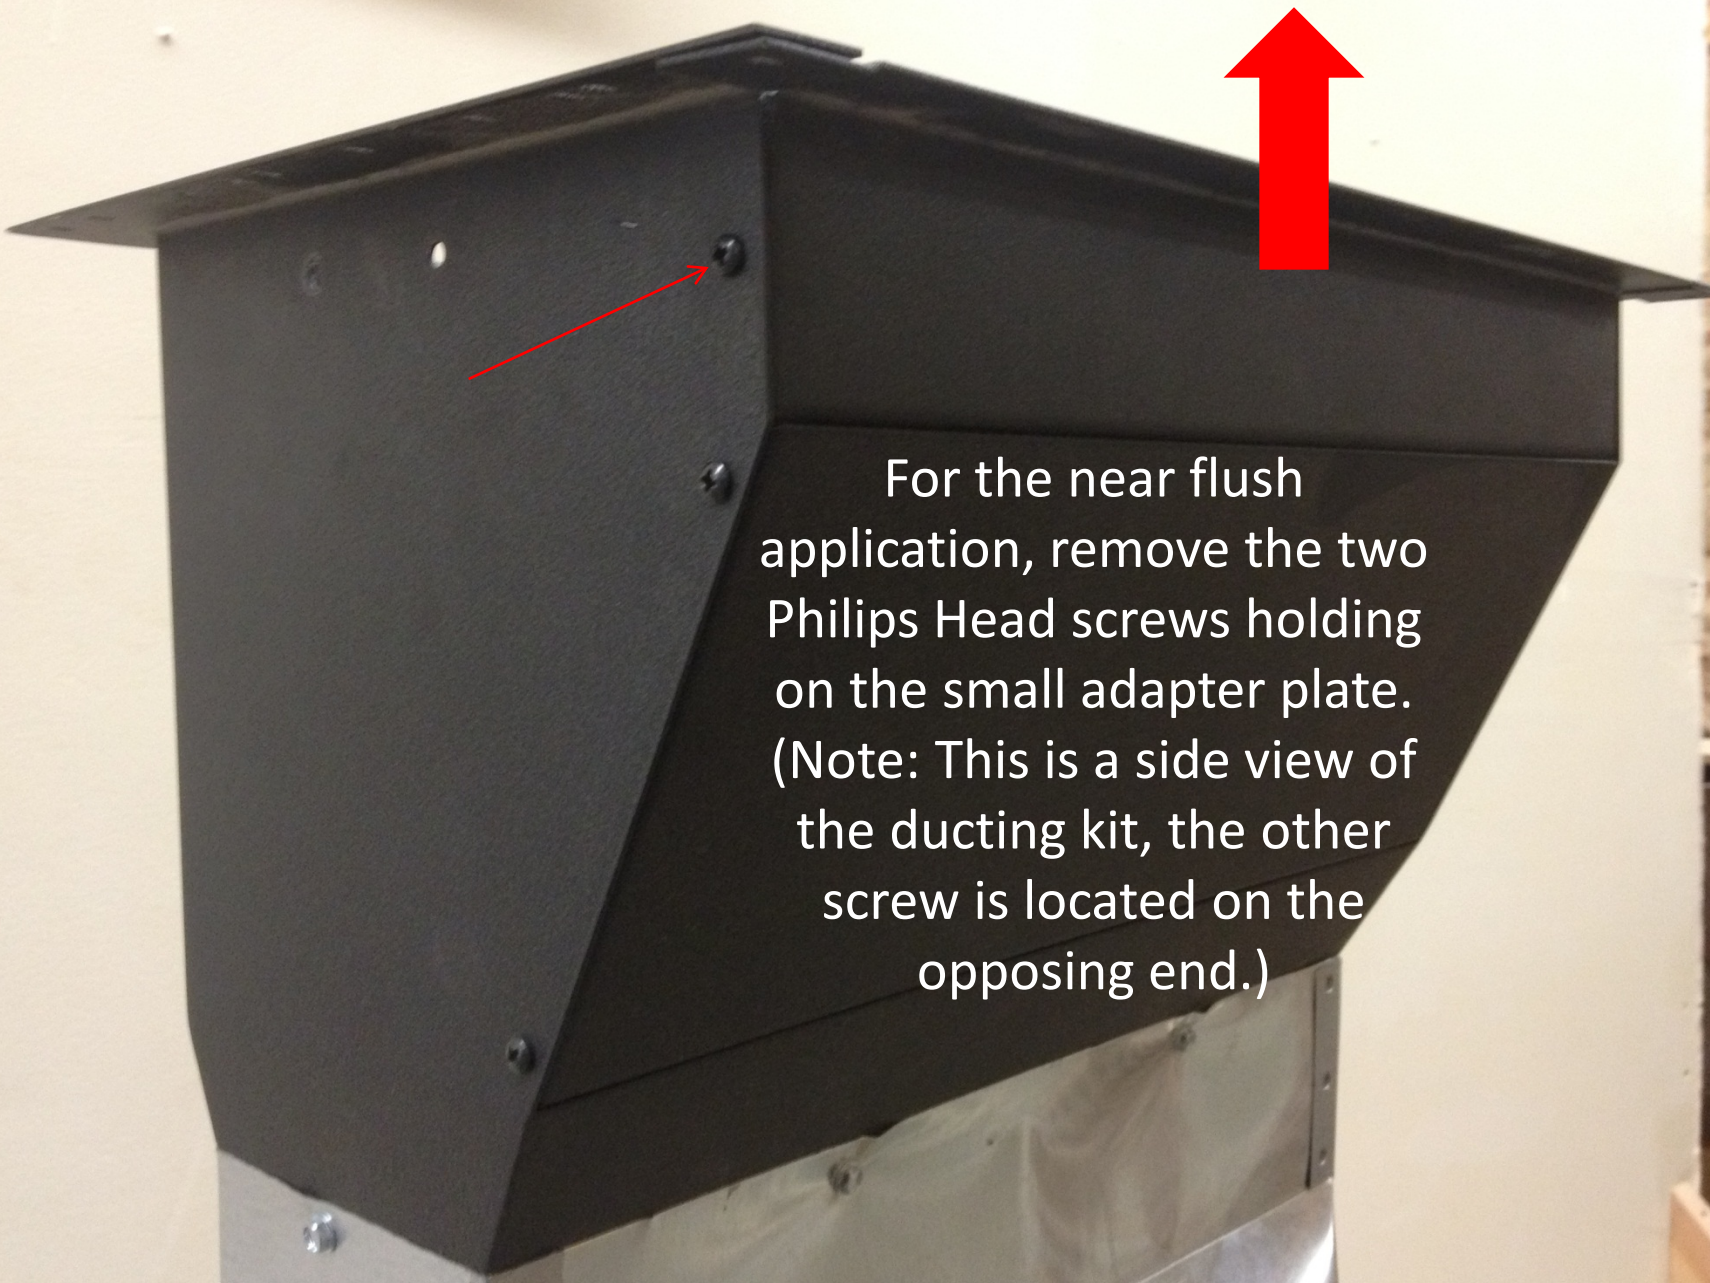

For the near flush application, remove the two Philips Head screws holding on the small adapter plate. (Note: This is a side view of the ducting kit, the other screw is located on the opposing end.)


Near Flush Installation

The ducting kit has been prepped for the Near Flush application and is ready for installation.




Near Flush Installation

If the unit has been mounted, remove the 8 Hex Head screws nearest the top of the unit. (Note: Six of the screws are mounted through the flange and into the wall (A), the other two are through the flange and into the unit. (B))

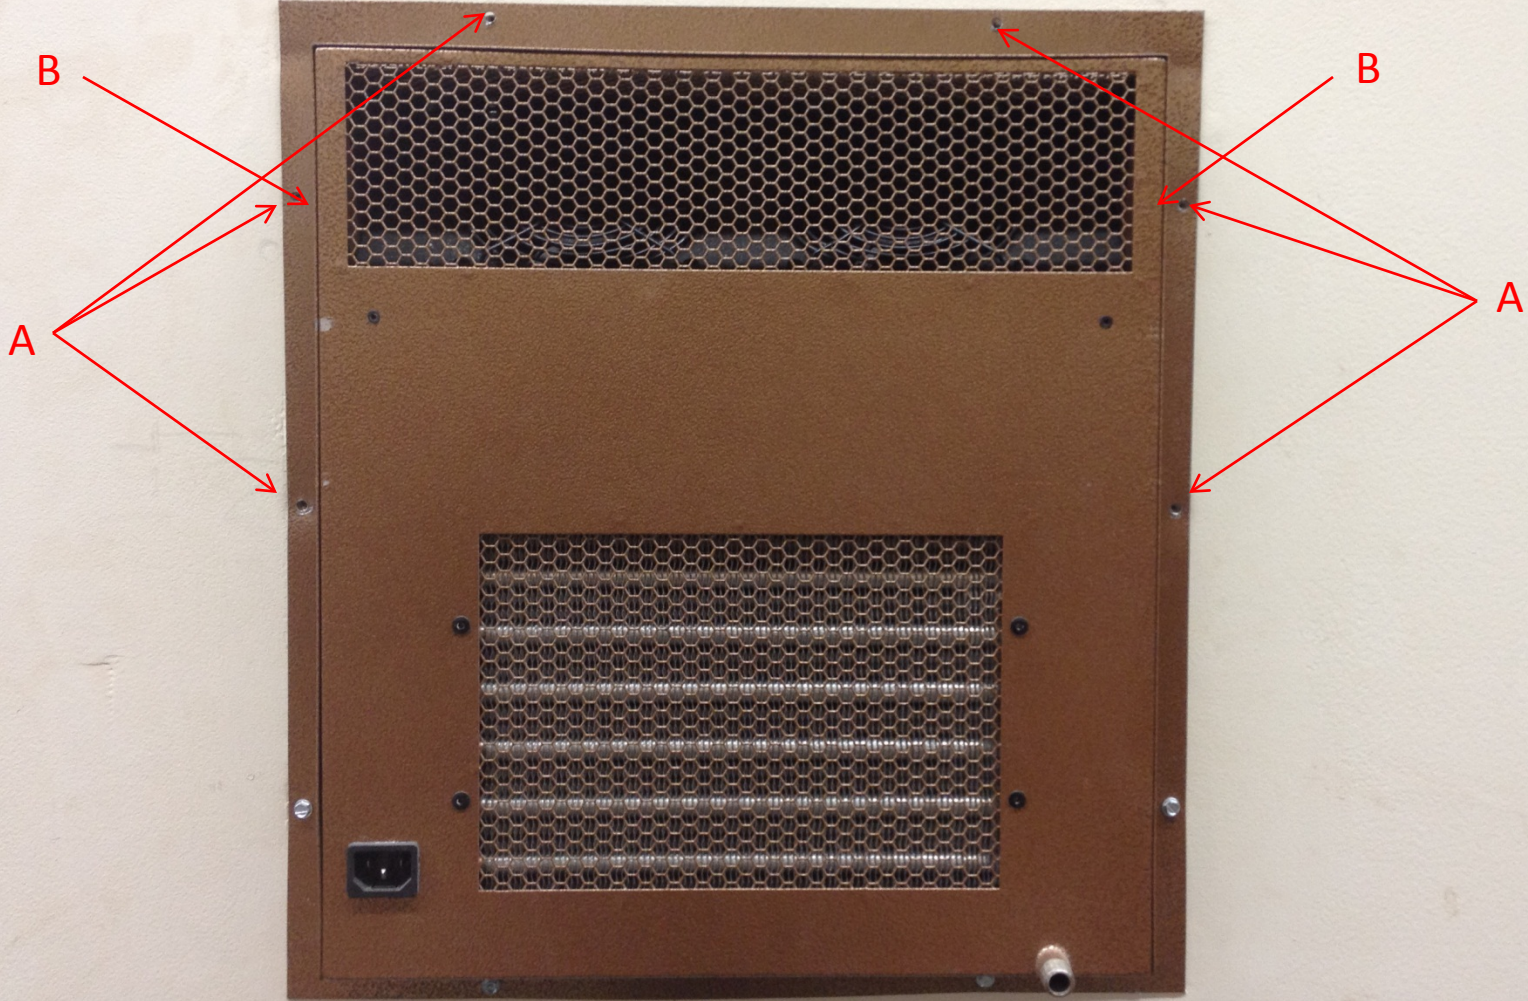


Near Flush Installation

Set the duct on the unit and slide it into place.

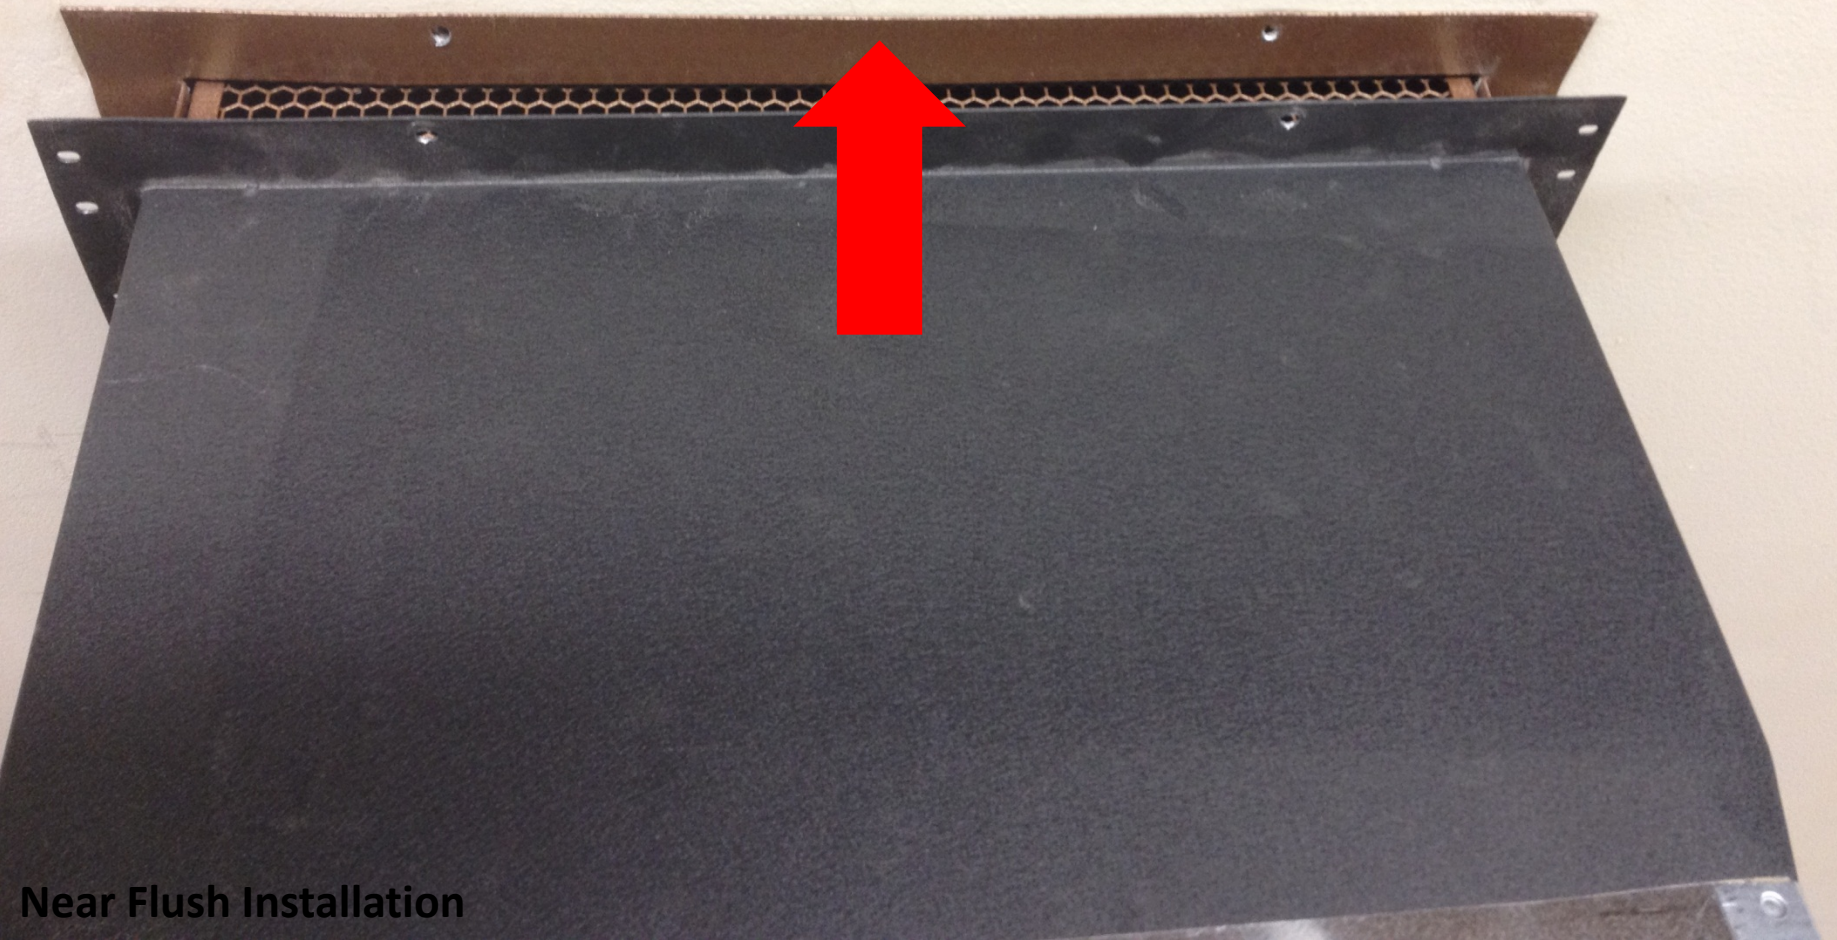

Near Flush Installation




Near Flush Installation

Holes on the ducting kit will line up with holes on the bracket, (D), and half shears on the unit.
(E) Reinstall the screws that were removed.




Near Flush Installation

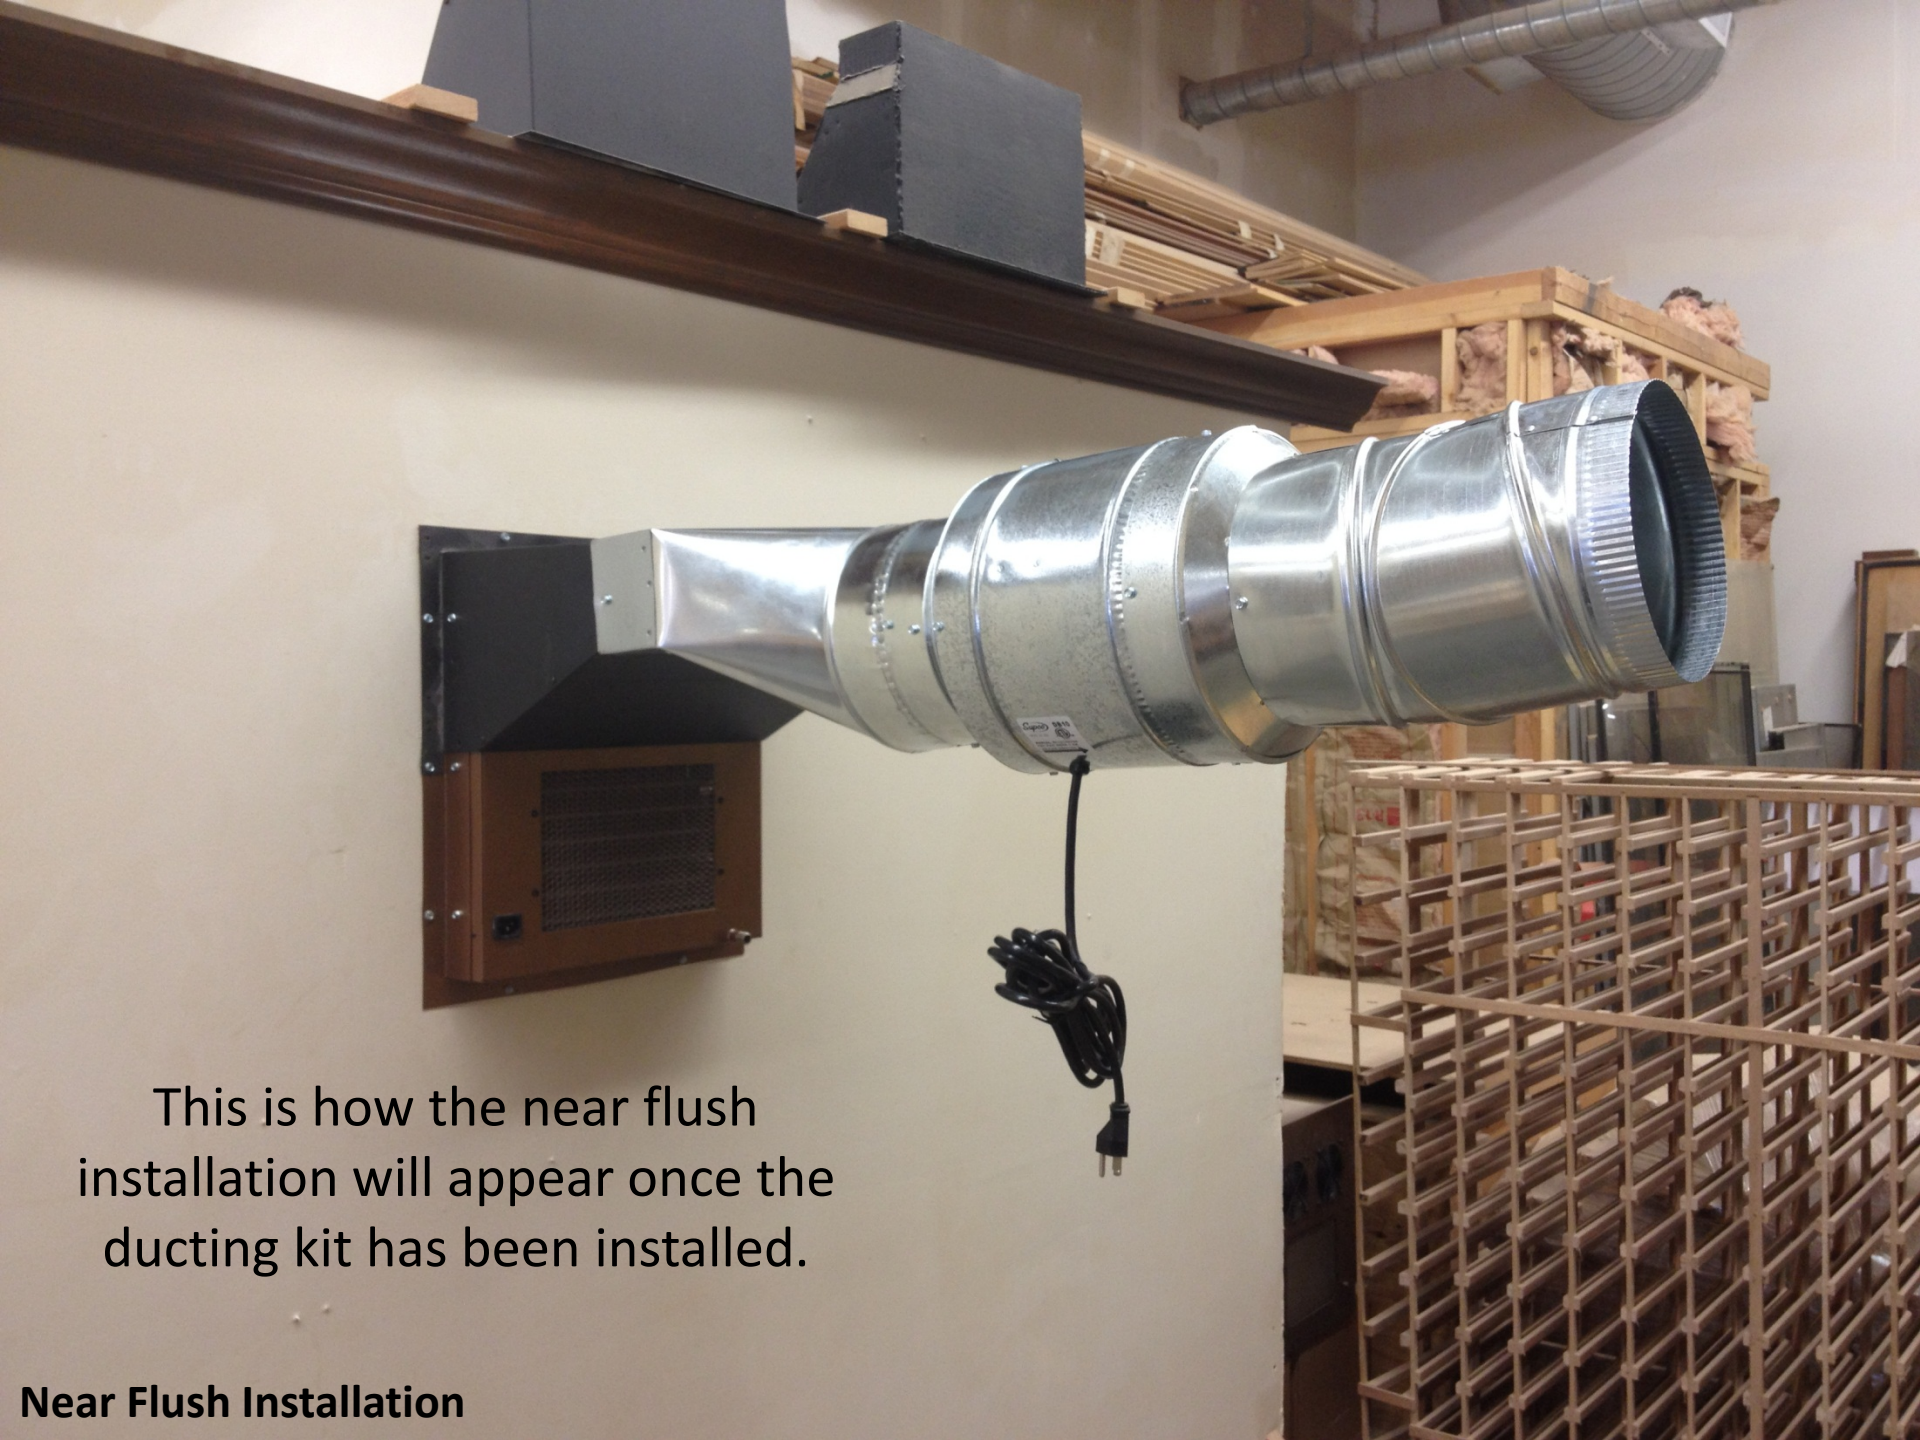

This is how the near flush installation will appear once the ducting kit has been installed.

Near Flush Installation

For the Standard application, remove the six Philips Head screws holding on both adapter plates.
(Note: This is a side view of the ducting kit, the other screws are located on the opposing end.)

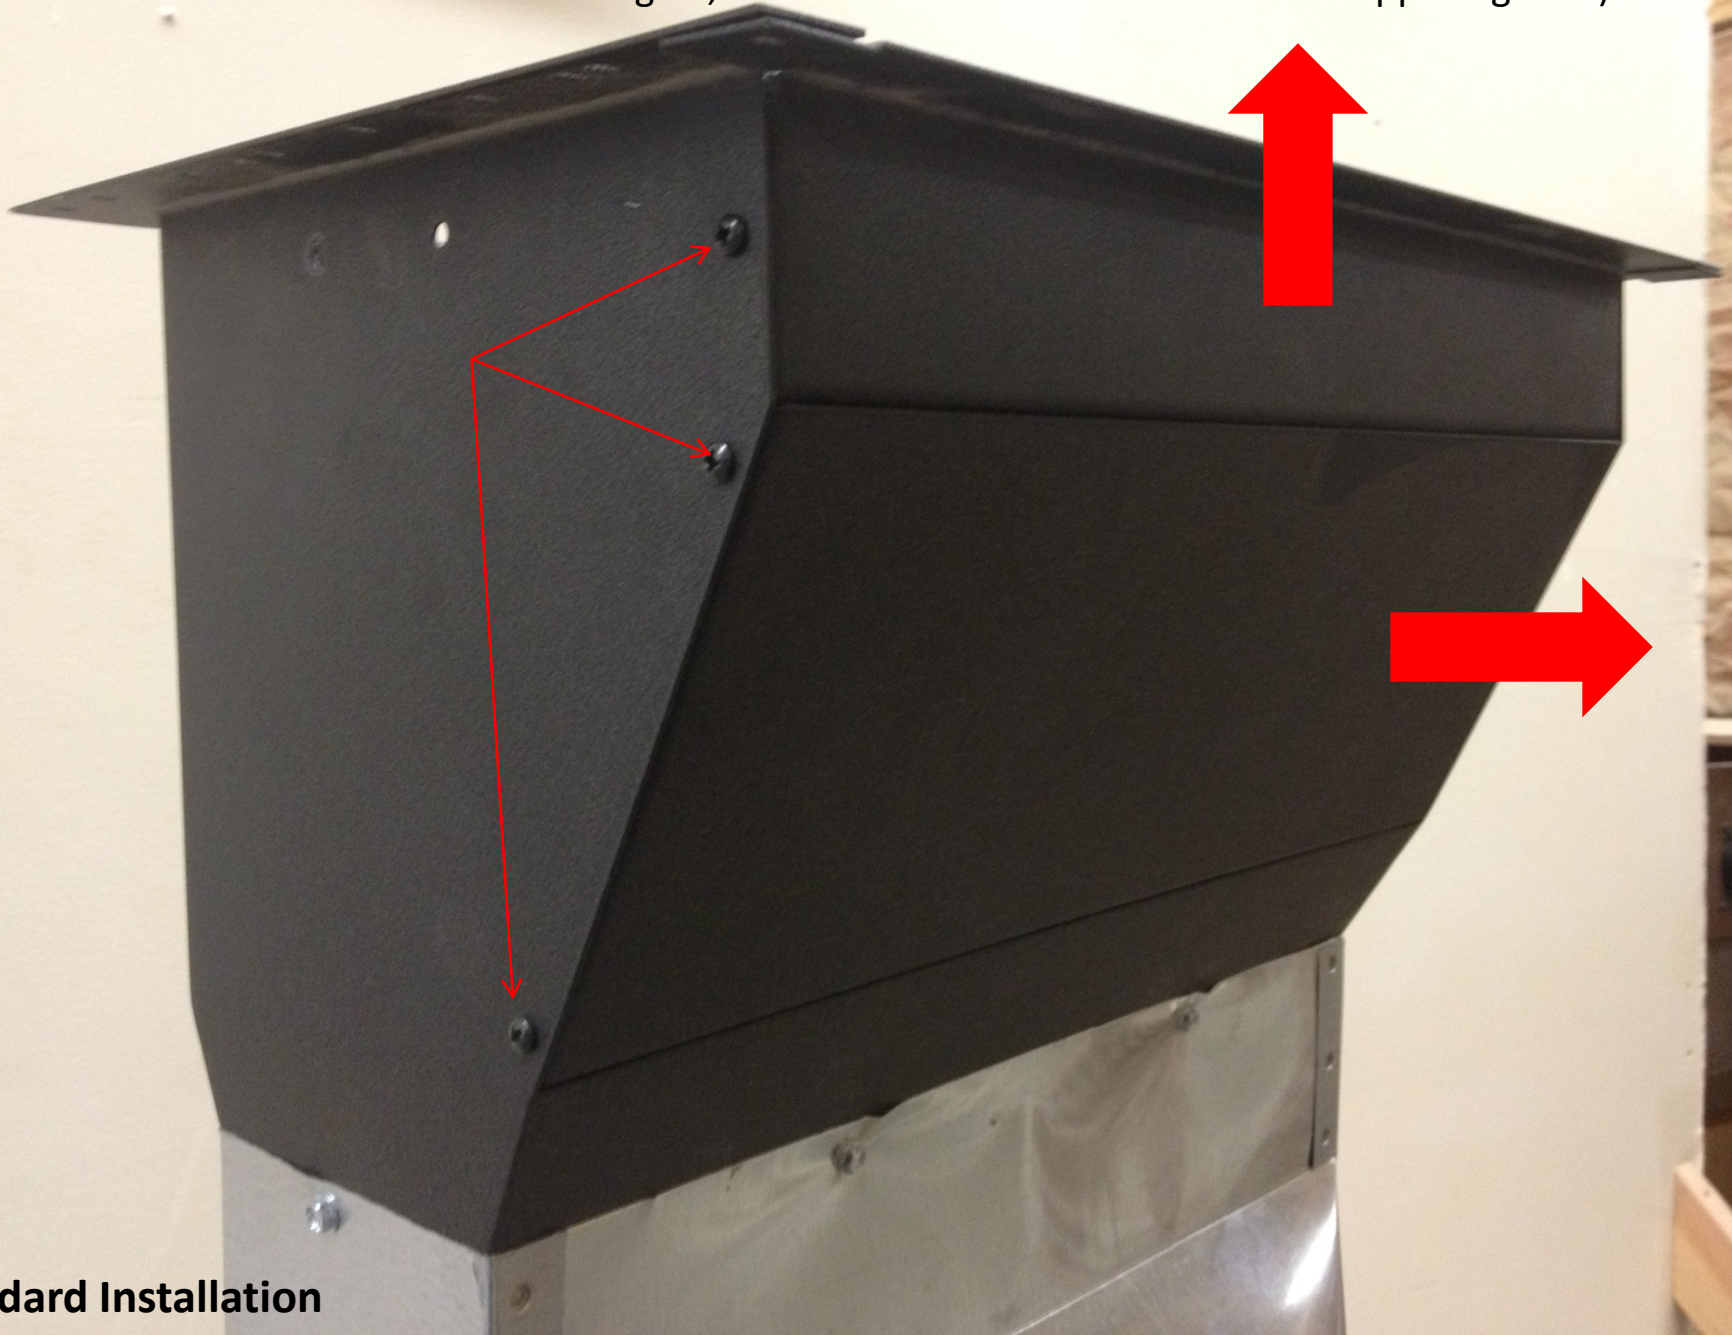


Standard Installation

The duct kit has been prepped for the Standard application and is ready for installation.



Standard Installation


If the unit has been mounted, remove the 8 screws nearest the top of the unit. (Note: Six of the screws are mounted through the flange and into the wall (A), the other two are through the flange and into the unit. (B))

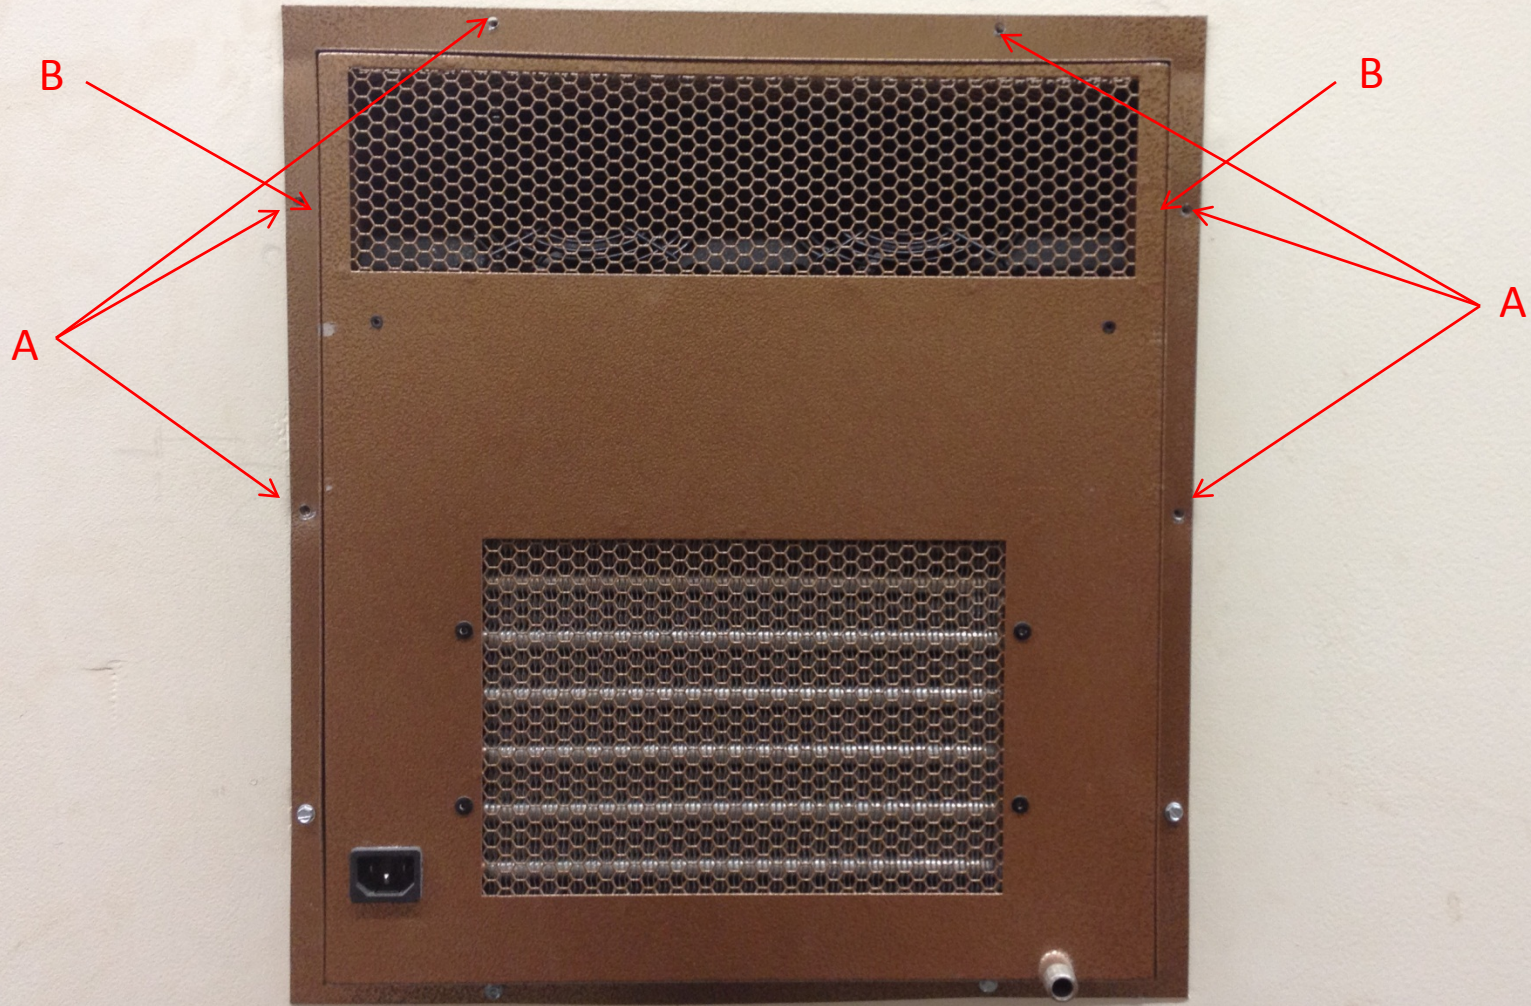

Set the duct on the unit and slide it into place.




Standard Installation




Standard Installation

Holes on the ducting kit will line up with holes on the bracket, (D), and half shears on the unit. (E) Reinstall the screws that were removed.

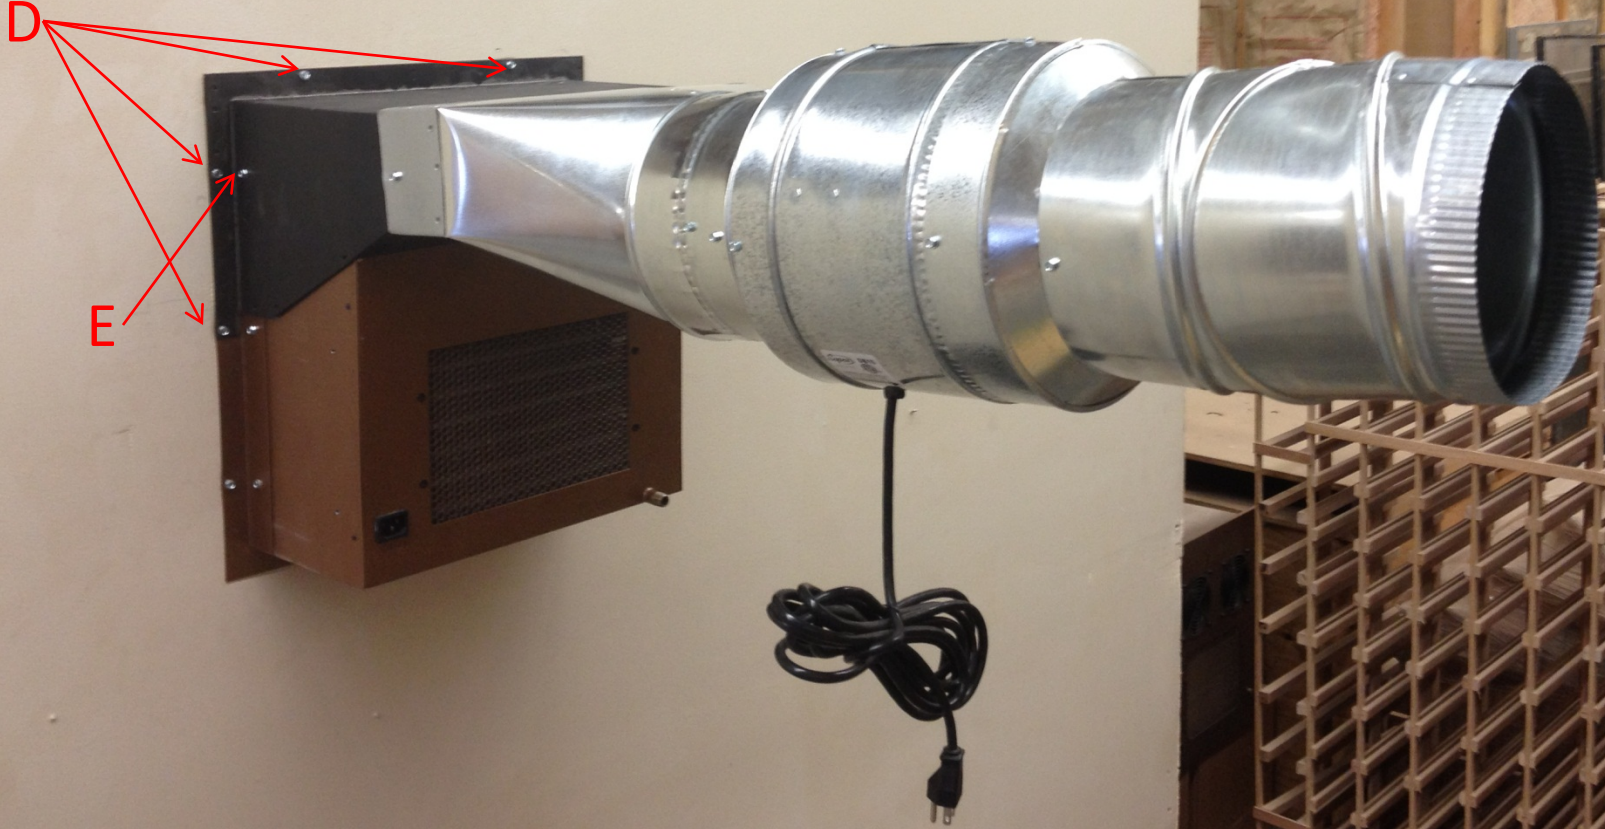

Standard Installation

This is how the near flush installation will appear once the ducting kit has been installed.

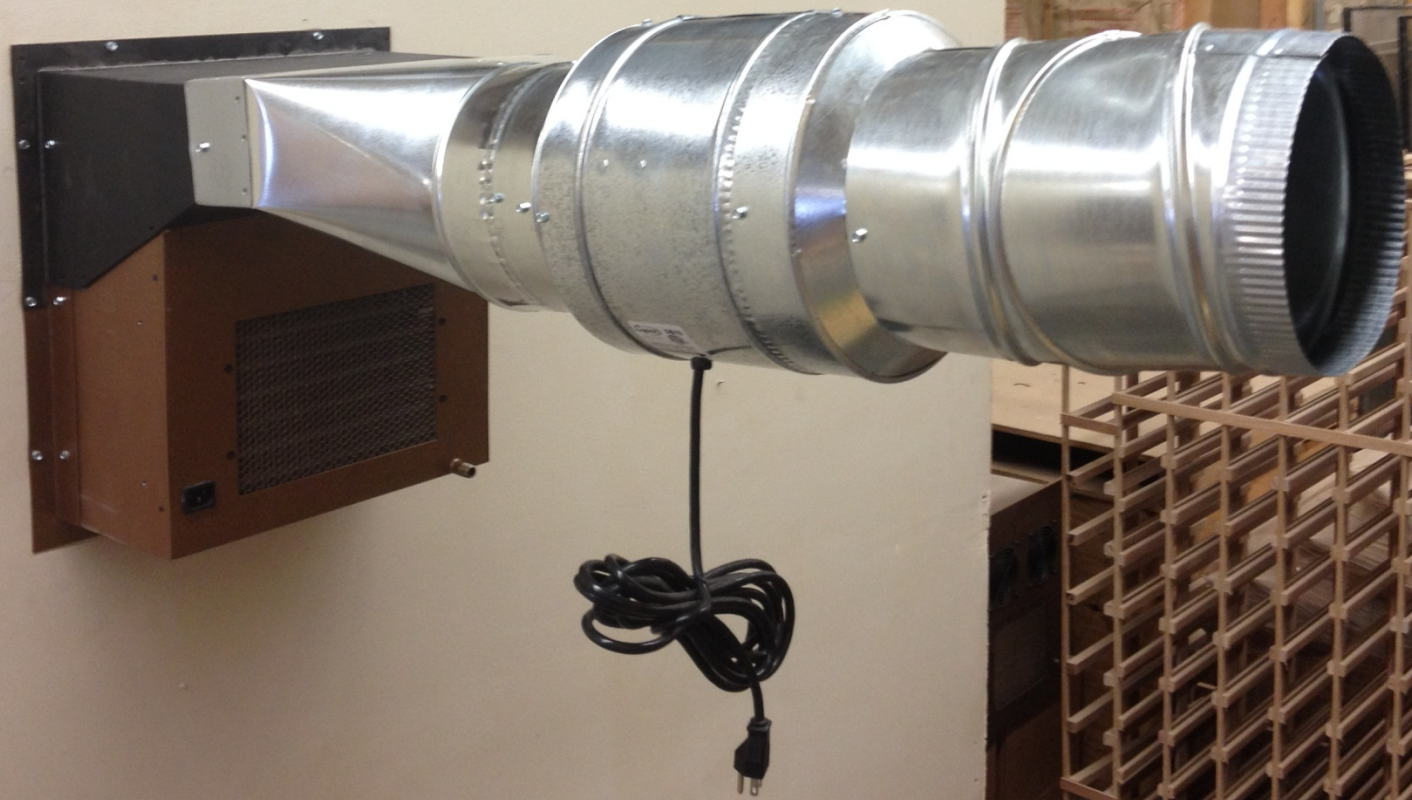

Standard Installation